KitchenAid® COOKTOP PARTS

30" Slide−In Range
DESIGNER STYLE
Convection Oven

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

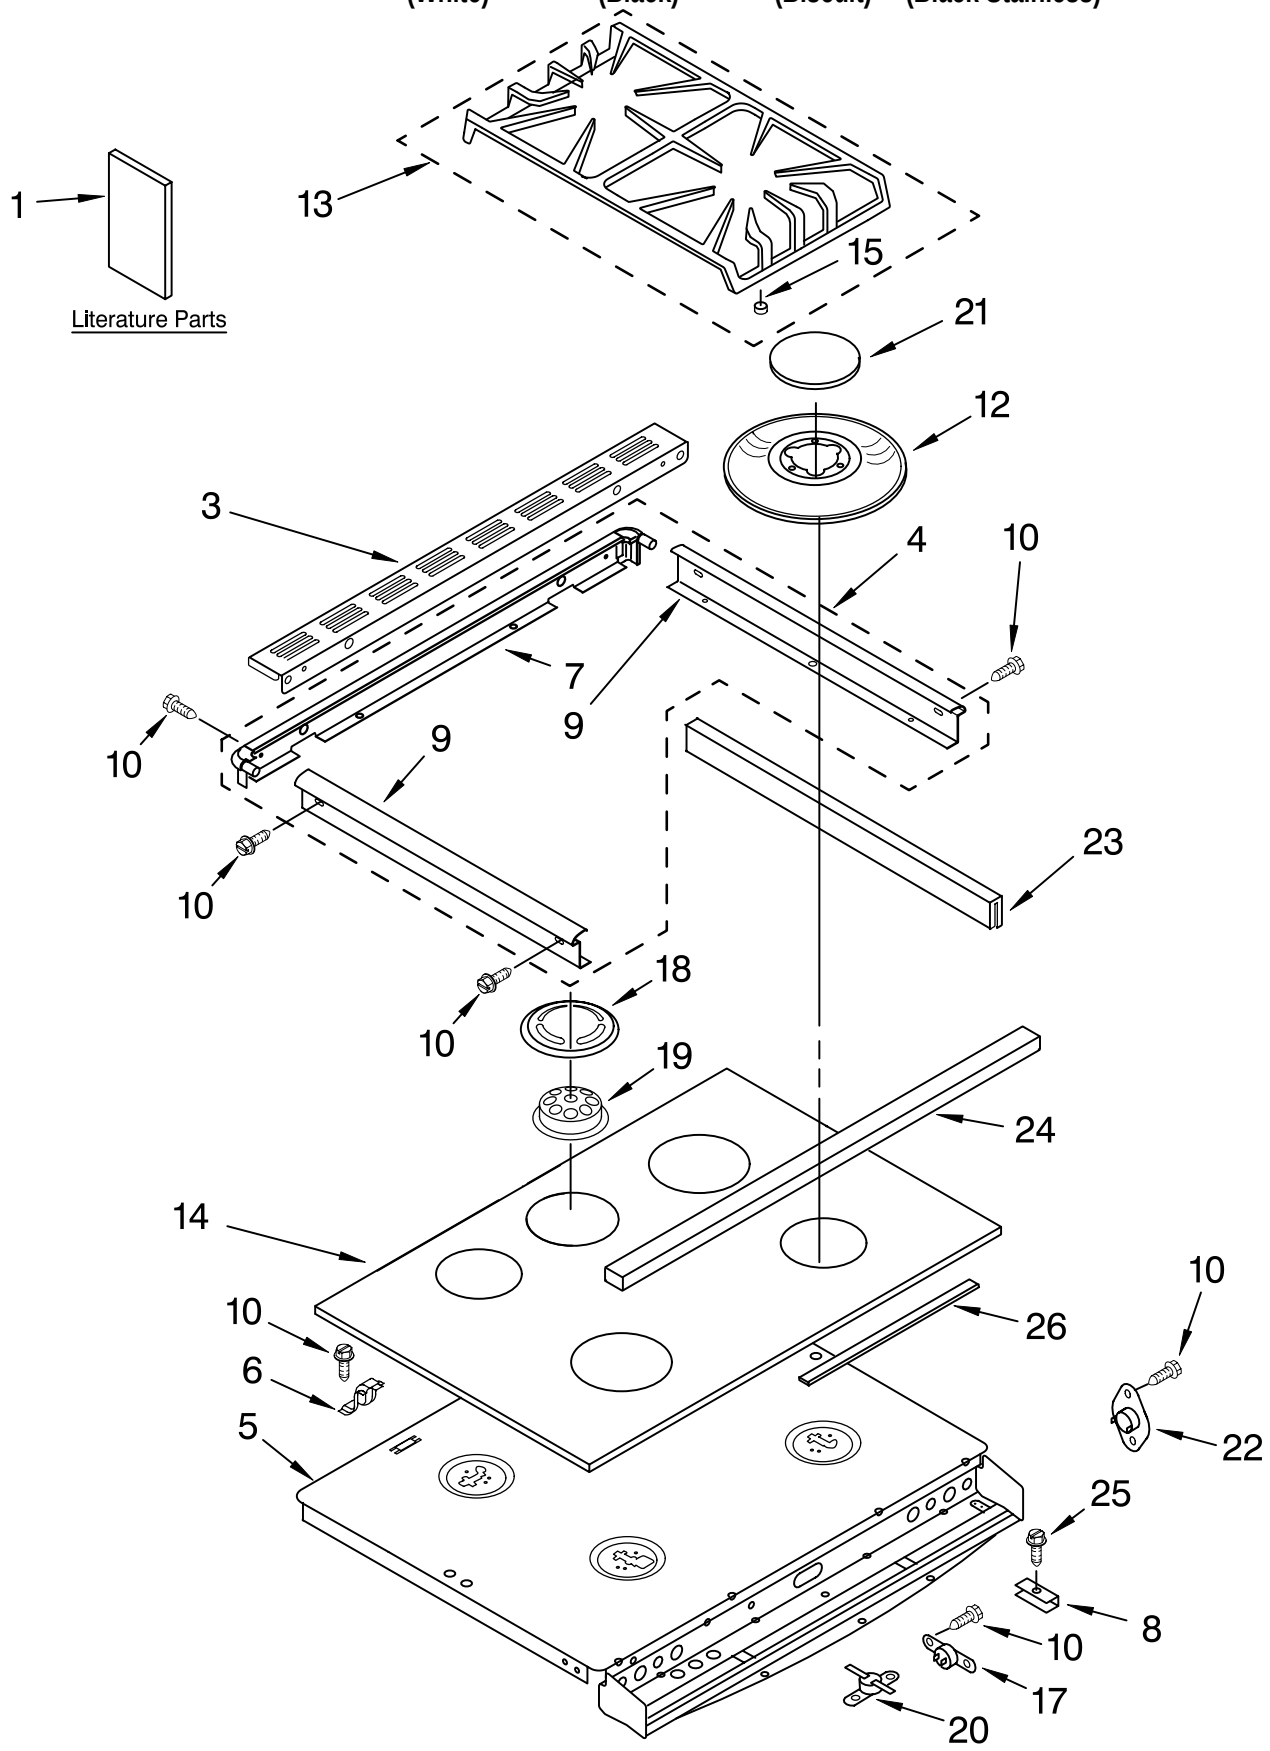

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9753562	Installation Instructions
	LIT4449066	Cookbook
	LIT9753620	Use & Care Guide
	LIT9752686	Smart & Easy Guide
	LIT9753621	Tech Sheet
	LIT9753622	Wiring Diagram
	LIT9752775	Template, Anti−Tip
	LIT9753848	LP Conv Instr.
	LIT3191638	Safe Cooking Tips
3		Vent, Rear
	9752090PW	White
	9752090PB	Black
	9752090PC	Biscuit
4		Frame, Cooktop
	9781832PW	White
	9781832PB	Black
	9781832PC	Biscuit
5	9754197	Support, Burner
6	9751629	Bracket, Pivot
	9752003	Washer, Pivot
7		Trim, Rear (Includes End Caps)
	9781831PW	White
	9781831PB	Black
	9781831PC	Biscuit
8	9750821	Support Clips (4)
9		Trim, Side
	9781828PW	White
	9781828PB	Black
	9781828PC	Biscuit
10	9780265	Screw, 10−16 x 3/8
12		Bezel, Burner
		Mouse Gray
	9753601GS	6K RF−LR
	9753602GS	12K RR
	9753600GS	14K LF
		Black
	9753601GB	6K RF−LR
	9753602GB	12K RR
	9753600GB	14K LF
13		Grate, Burner
	9753616GS	Mouse Gray
	9753616GB	Black
14		Cooktop, Glass
	9753606CO	Opaque White
	9753606CB	Black
	9753606CT	Honeycomb
15	9752638	Pad, Grate (4)
17	341196	Thermo−Disc
18		Cap, Vent
	9751271GW	White
	9751271GB	Black
	9751271GC	Biscuit
19	9751366	Cap, Vent
20	9751984	Fuse, Bi−Metal
21		Cap, Burner
		Mouse Gray
	3191899	6K RF−LR
	3191905	12K RR
	9753939GS	14K LF
		Black
	3191898	6K RF−LR
	3191904	12K RR
	9753939GB	14k LF
22	9752006	Thermostat, Fixed
23	9752034	Seal, Rubber (2)
24	9754103	Gasket, Cooktop
25	9751871	Screw, 10−16 x 1
26	9754136	Pad, Cooktop

COOKTOP BURNER PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

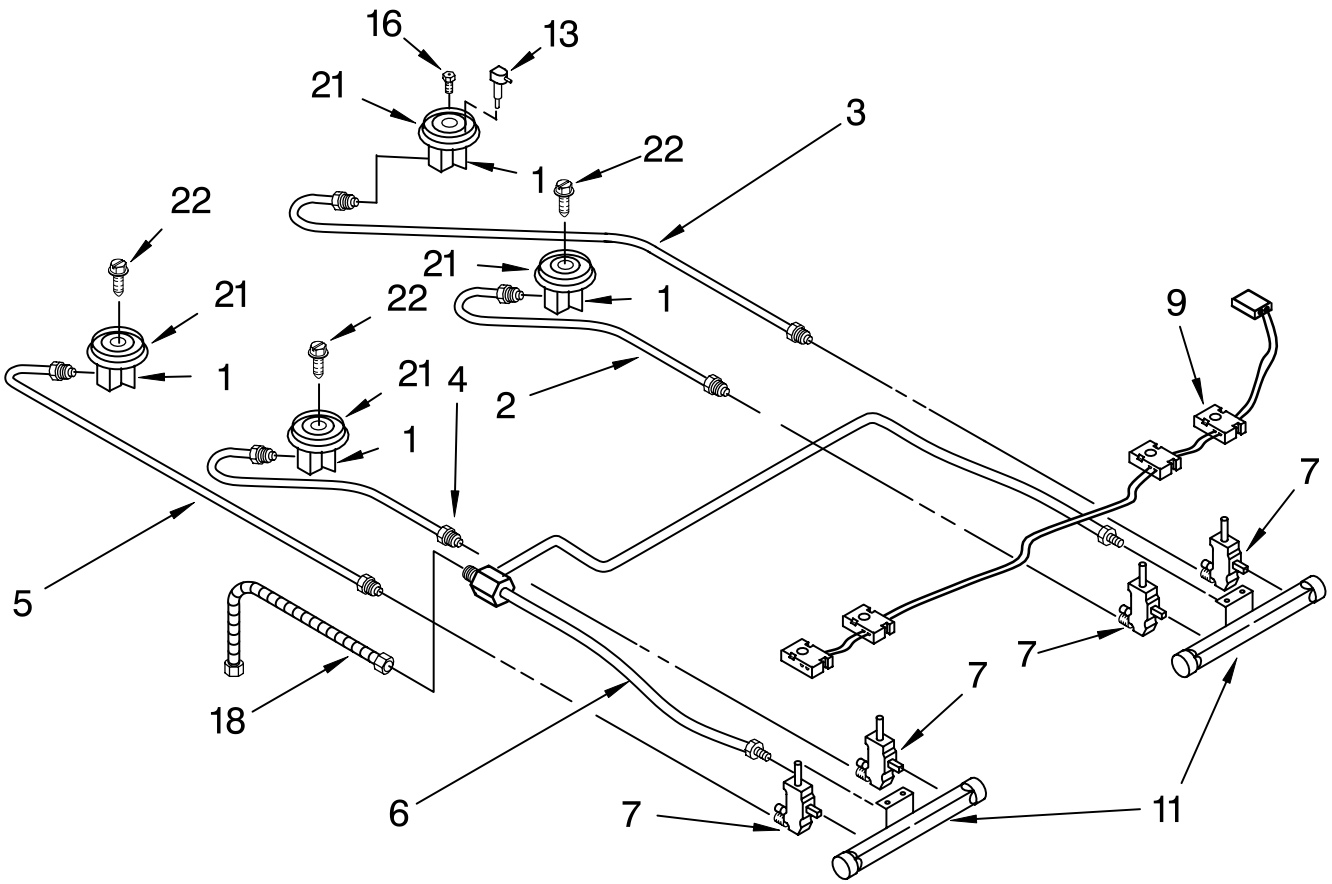

Illus. No.	Part No.	DESCRIPTION
1		Burner Base W/Orifice
	9754183	6K RF−LR
	9754189	12K RR
	9754192	14K LF
2	9753610	Tubing, Burner(RF)
3	9753611	Tubing, Burner(RR)
4	9753608	Tubing, Burner(LF)
5	9753609	Tubing, Burner(LR)
6	9754148	Tubing, Manifold
7		Valve, Burner
	9753045	6K, Red Stem
	9753044	12K, Black Stem
	9753614	14K, Plain Stem
	3185829	Bolt, Gas Valve
9	9752994	Spark Switch & Harness Assembly
11		Manifold
	9754116L	Left Hand
	9754116R	Right Hand
13	8273061	Electrode
16		Orifice, Burner
	9753928	6K Small Base
	9753929	12K Medium base
	9753930	14K Large Base
18	9751854	Tubing, Flex
21		Head, Burner
	8273216	6K RF−LR
	8273214	12K RR
	9754181	14K LF
22	8281147	Screw, 8−18 x .650

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

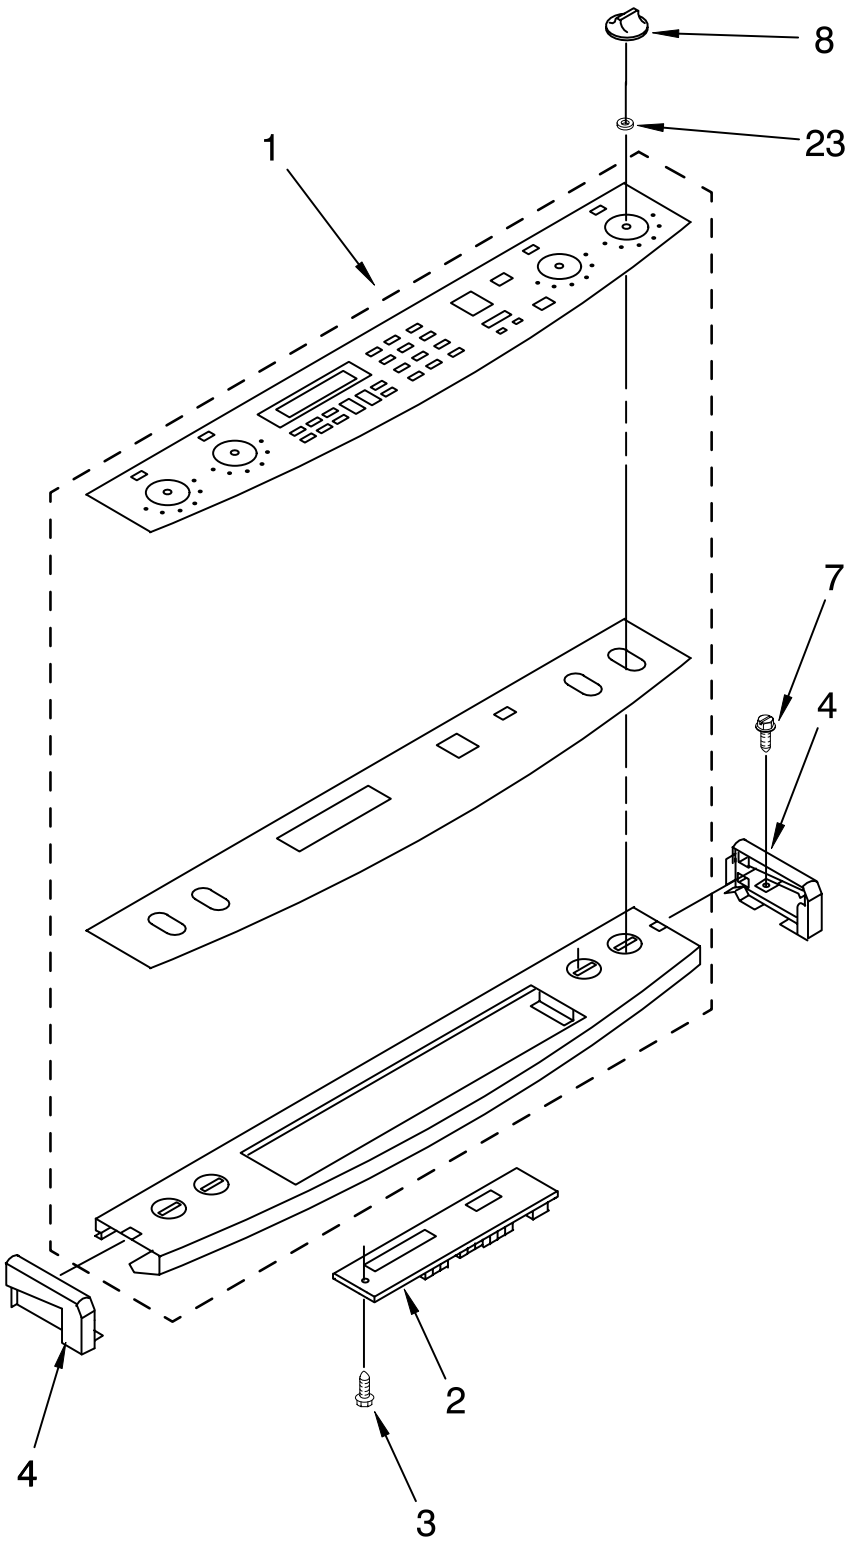

Illus. No.	Part No.	DESCRIPTION
1		Console, Glass
	9781973CW	White
	9781973CB	Black
	9781973CC	Biscuit
2	9781980	Timer, Electronic
3	9780271	Screw, 8−18 x 1/4
4		End Cap
		Right Hand
	9751040FW	White
	9751040FB	Black
	9751040FC	Biscuit
		Left Hand
	9751039FW	White
	9751039FB	Black
	9751039FC	Biscuit
7	9780265	Screw, 10−16 x 3/8
8		Knobs, Control (4)
	9751199FW	White
	9751199FF	Black
	9751199FC	Biscuit
23	3191387	Seal, Switch

DOOR AND DRAWER PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4

(White) (Black) (Biscuit) (Black Stainless)

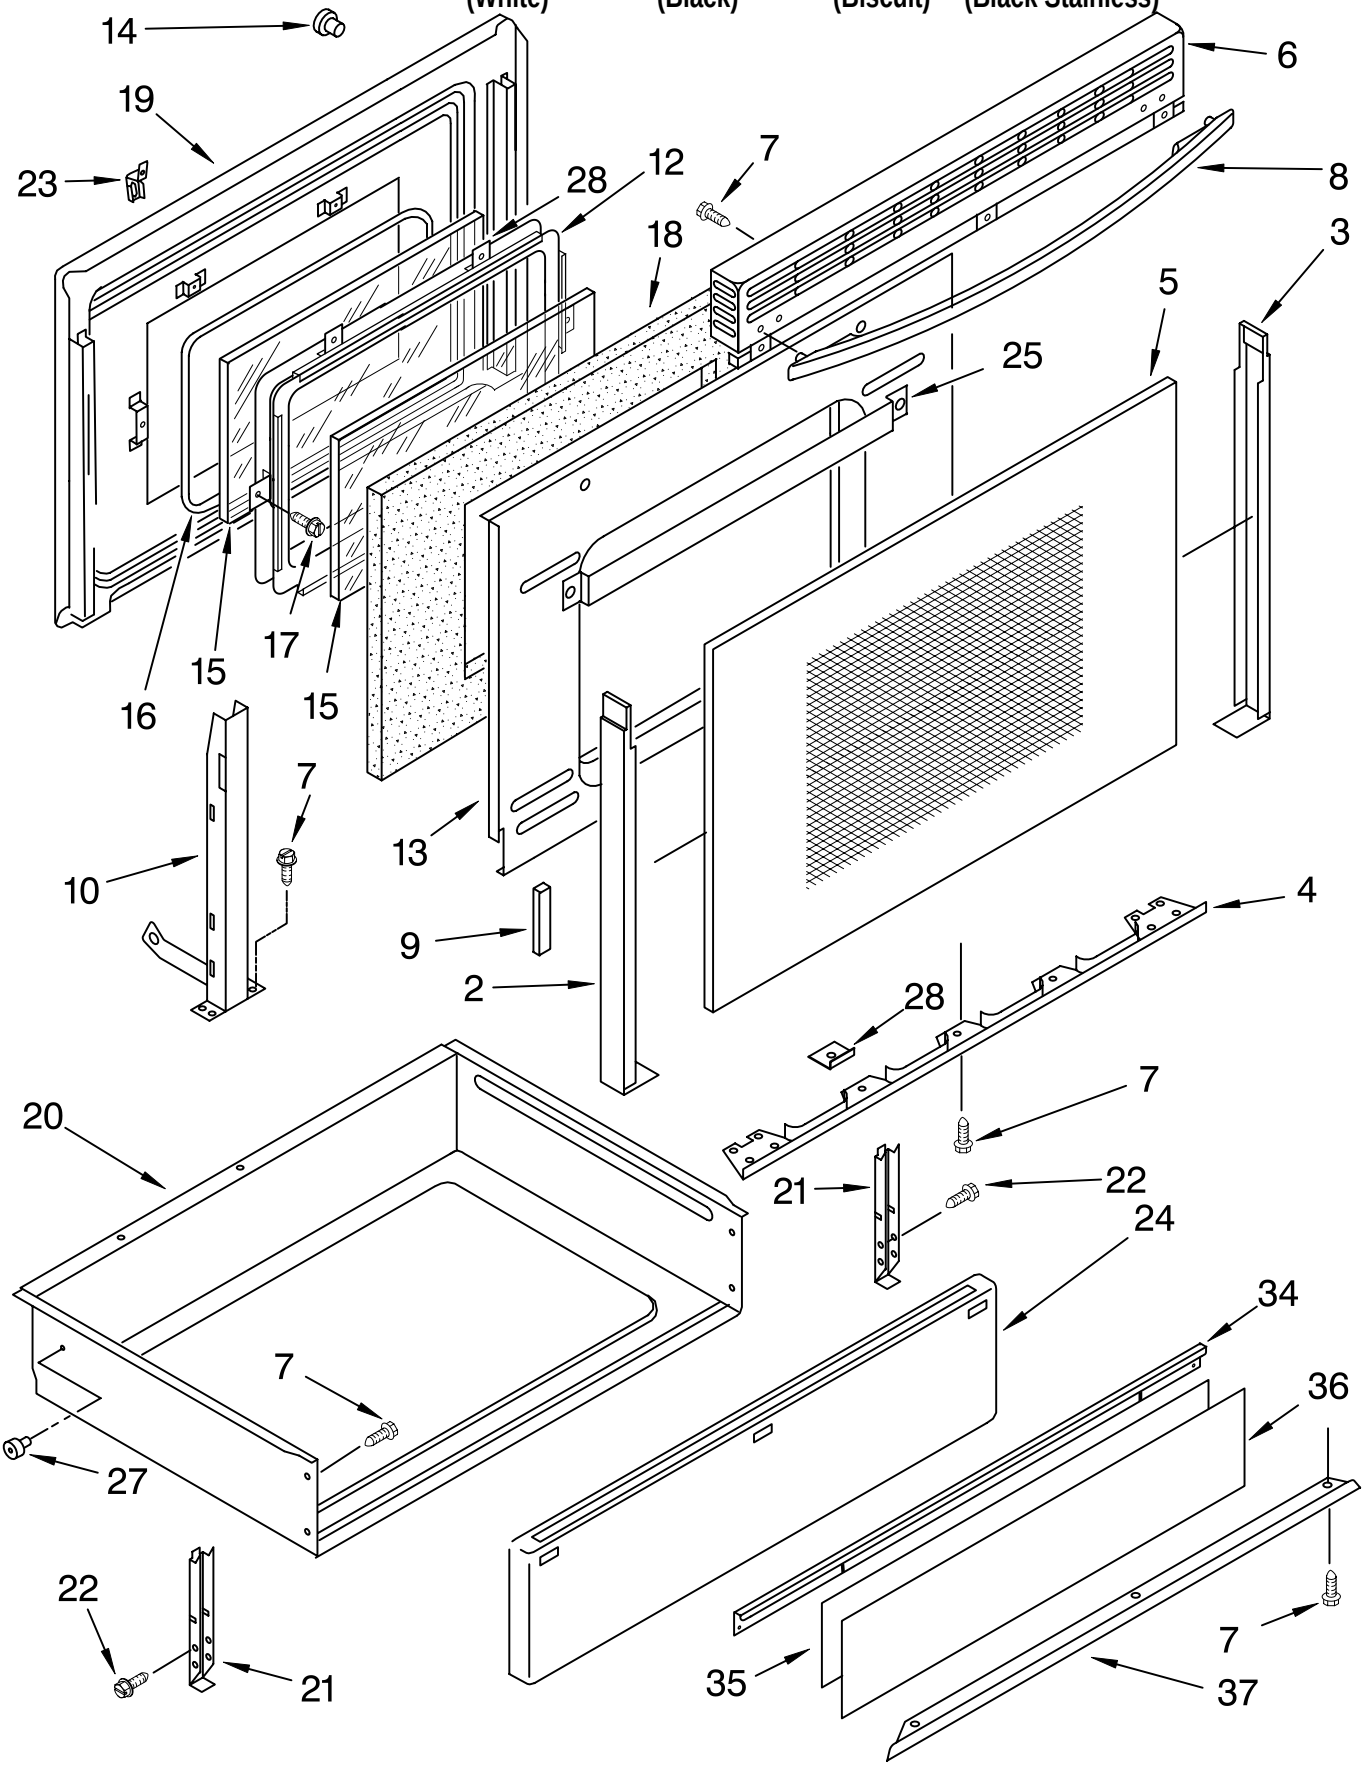

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4

(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
2		Trim, Door−Left
	9782003PW	White
	9782003PB	Black
	9782003PC	Biscuit
3		Trim, Door−Right
	9782004PW	White
	9782004PB	Black
	9782004PC	Biscuit
4		Trim, Door Bottom
	9781209PW	White
	9781209PB	Black
	9781209PC	Biscuit
5		Glass, Door
	9781627PW	White
	9781627PB	Black
	9754041	Stainless
	9781627PC	Biscuit
6		Vent, Door
	9753498GW	White
	9753498GB	Black
	9753498GC	Biscuit
7	9780265	Screw, 10−16 x 3/8
	9781659	Gasket, Door Vent
	9781490	Seal, Door (2)
8		Handle, Door
	9780523PW	White
	9780523PB	Black
	9780523PC	Biscuit
9	9781449	Gasket, Door Glass
10	9750234	Hinge, Door R or L
12	9781602	Frame, Glass
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass, Pyro Door
16	9781587	Seal, Glass
17	9780271	Screw, 8−18 x 1/4
18	9754006	Insulation
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
	9750257	For Stn.Steel Mdl.
21	9750169	Bracket, Drawer
22	9780272	Screw, 10−16 x 1/2
23	9750676	Retainer, clip
24		Front, Drawer
	9750168PW	White
	9750168PB	Black
	9750569PB	For Stn.Steel Mdl.
	9750168PC	Biscuit
25	9750693	Heat Channel
27	423713	Support, Roller
	90296	Clip
28	9781502	Spacer, Door (8)
34	9750614PB	Trim,Drawer−Top
		For Stn.Steel Mdl.
35	9753329	Spacer(Stn.Mdl.)
36	9753293	Panel,Drawer
		For Stn.Steel Mdl.
37	9750613PB	Trim,Drawer−Btm
		For Stn.Steel Mdl.

OVEN CHASSIS PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

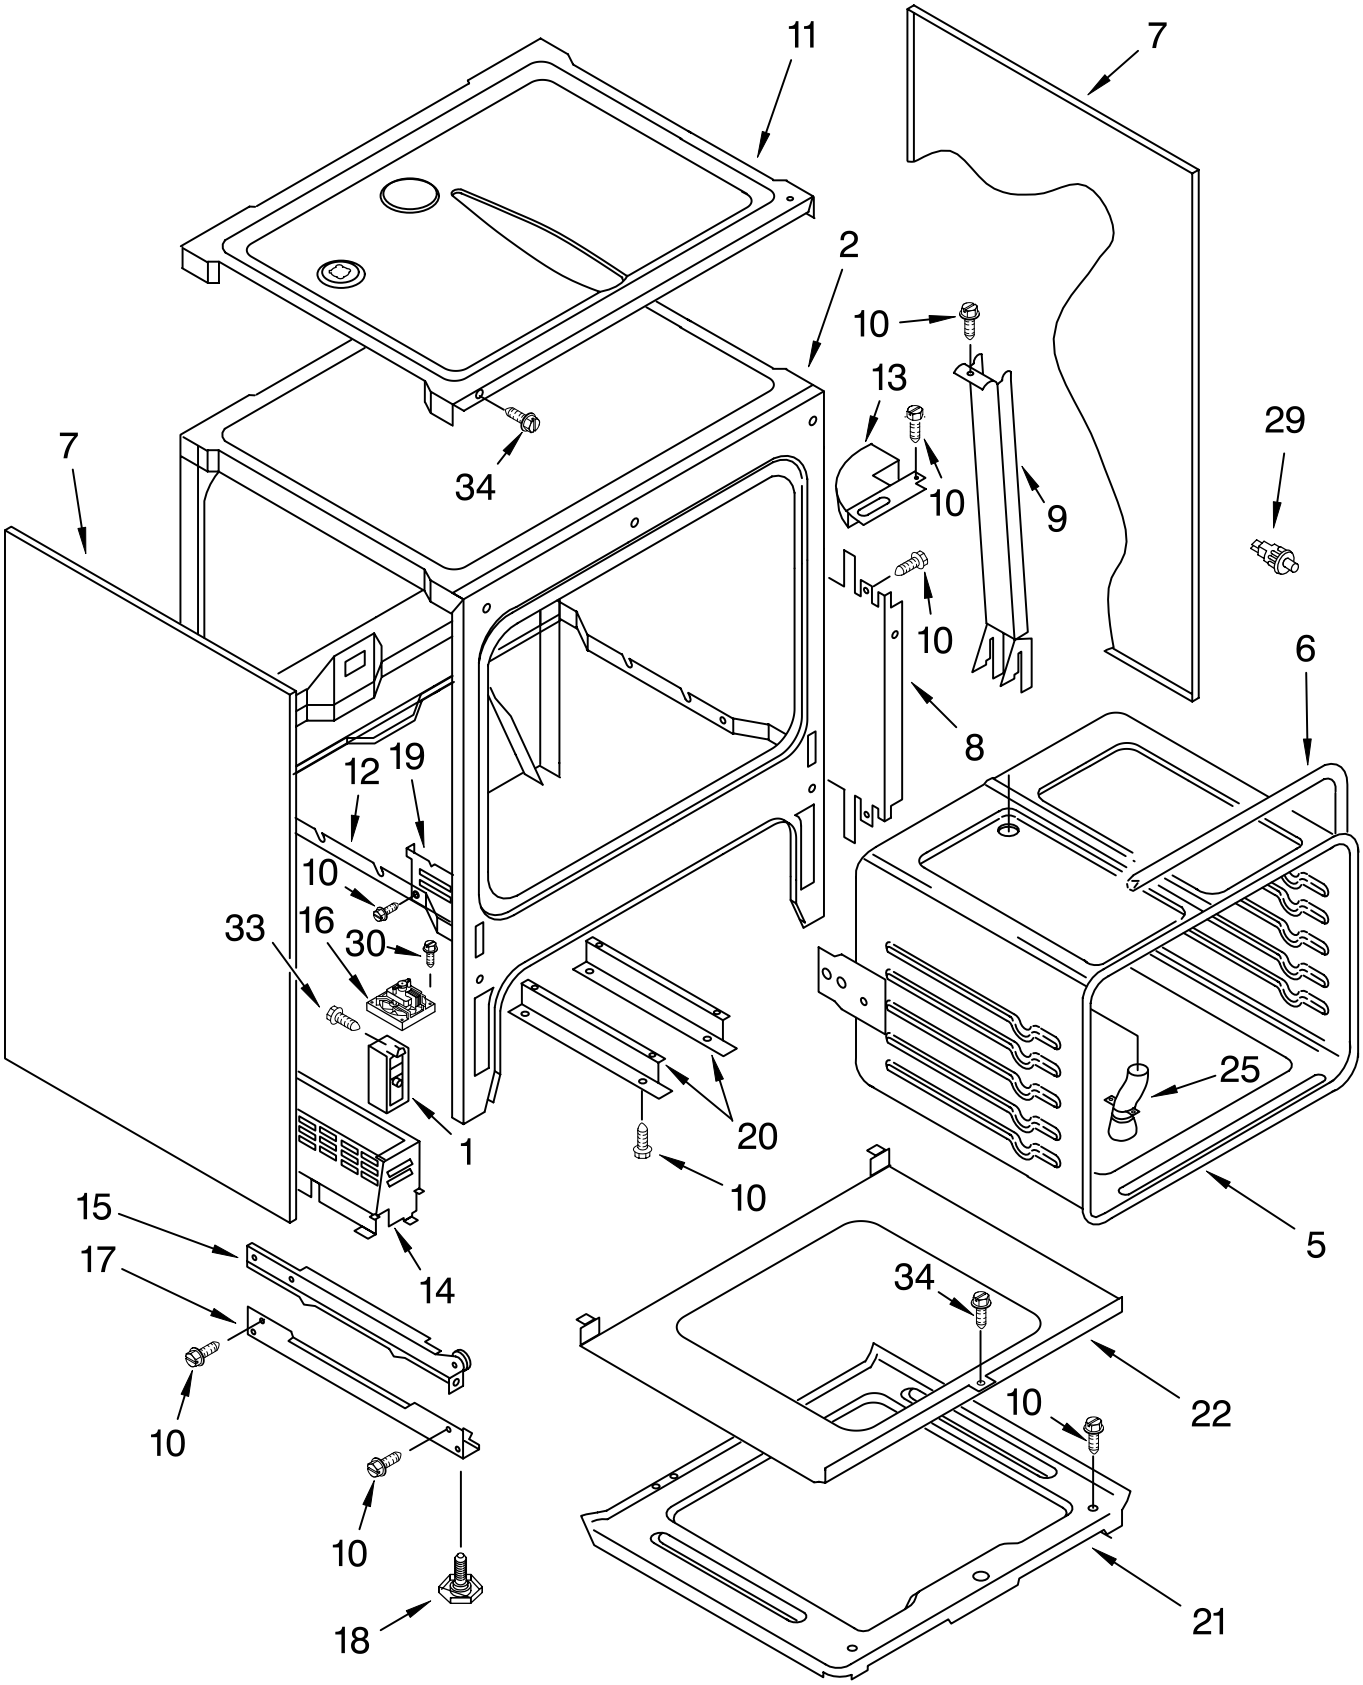

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	8053421	Module, Spark
2	9750514GM	Chassis, Front
5	9753335GM	Oven Liner
6	3191649	Gasket Oven
7		Oven, Side L or R
	9781907PW	White
	9781907PB	Black
	9781907PC	Biscuit
8	9780664	Shield, Insulation
	9780265	Screw (2)
9	9751789	Fan Duct, Side
10	9780265	Screw, 10−16 x 3/8
11	9752637	Burner Box
12	9752735	Retainer, Insulation
13	9751653	Duct, Top
14	9751060	Support, Fan
15		Drawer Rail
	9750223	Left
	9750224	Right
16	9751020	Motor, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9750149	Hinge, Door L or R
20	9781904	Support Rail, Pan
21	9781025	Shield, Drawer
22	9751641	Plate, Reflectance
25	9751592	Vent Tube
29	9781581	Door Switch
30	9751808	Screw, 8−18 x 1
33	9780269	Screw, 8−32 x 3/8
34	9751871	Screw, 10−16 x 1

BROILER & OVEN BURNER PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9752737	Shield, Oven (2)
2	9752738	Flame Shield, Bake
3	9753183	Burner, Broiler
4	9751367	Burner, Bake
6	9753108	Ignitor, Common Bake & Broil
7	9752858	Bracket, Broil Shooter
8	9752736GM	Pan, Oven Bottom
9	9751173	Tubing, Broil
10	9752698	Valve & Regulator Assembly
12	9781015	Tubing, Valve To Regulator
13	9752734	Pan Support, Bake
14	9751600	Bracket, Bake
15	9751203	Nut #18 5/8
16	9752920	Coverbox (Broiler Tubing)
17	9752716	Orifice #54
18	9751643	Screw, 10−24 x 3/8
20	9780265	Screw, 10−16 x 3/8
21	776593	Screw,1/4 20 x 1/2

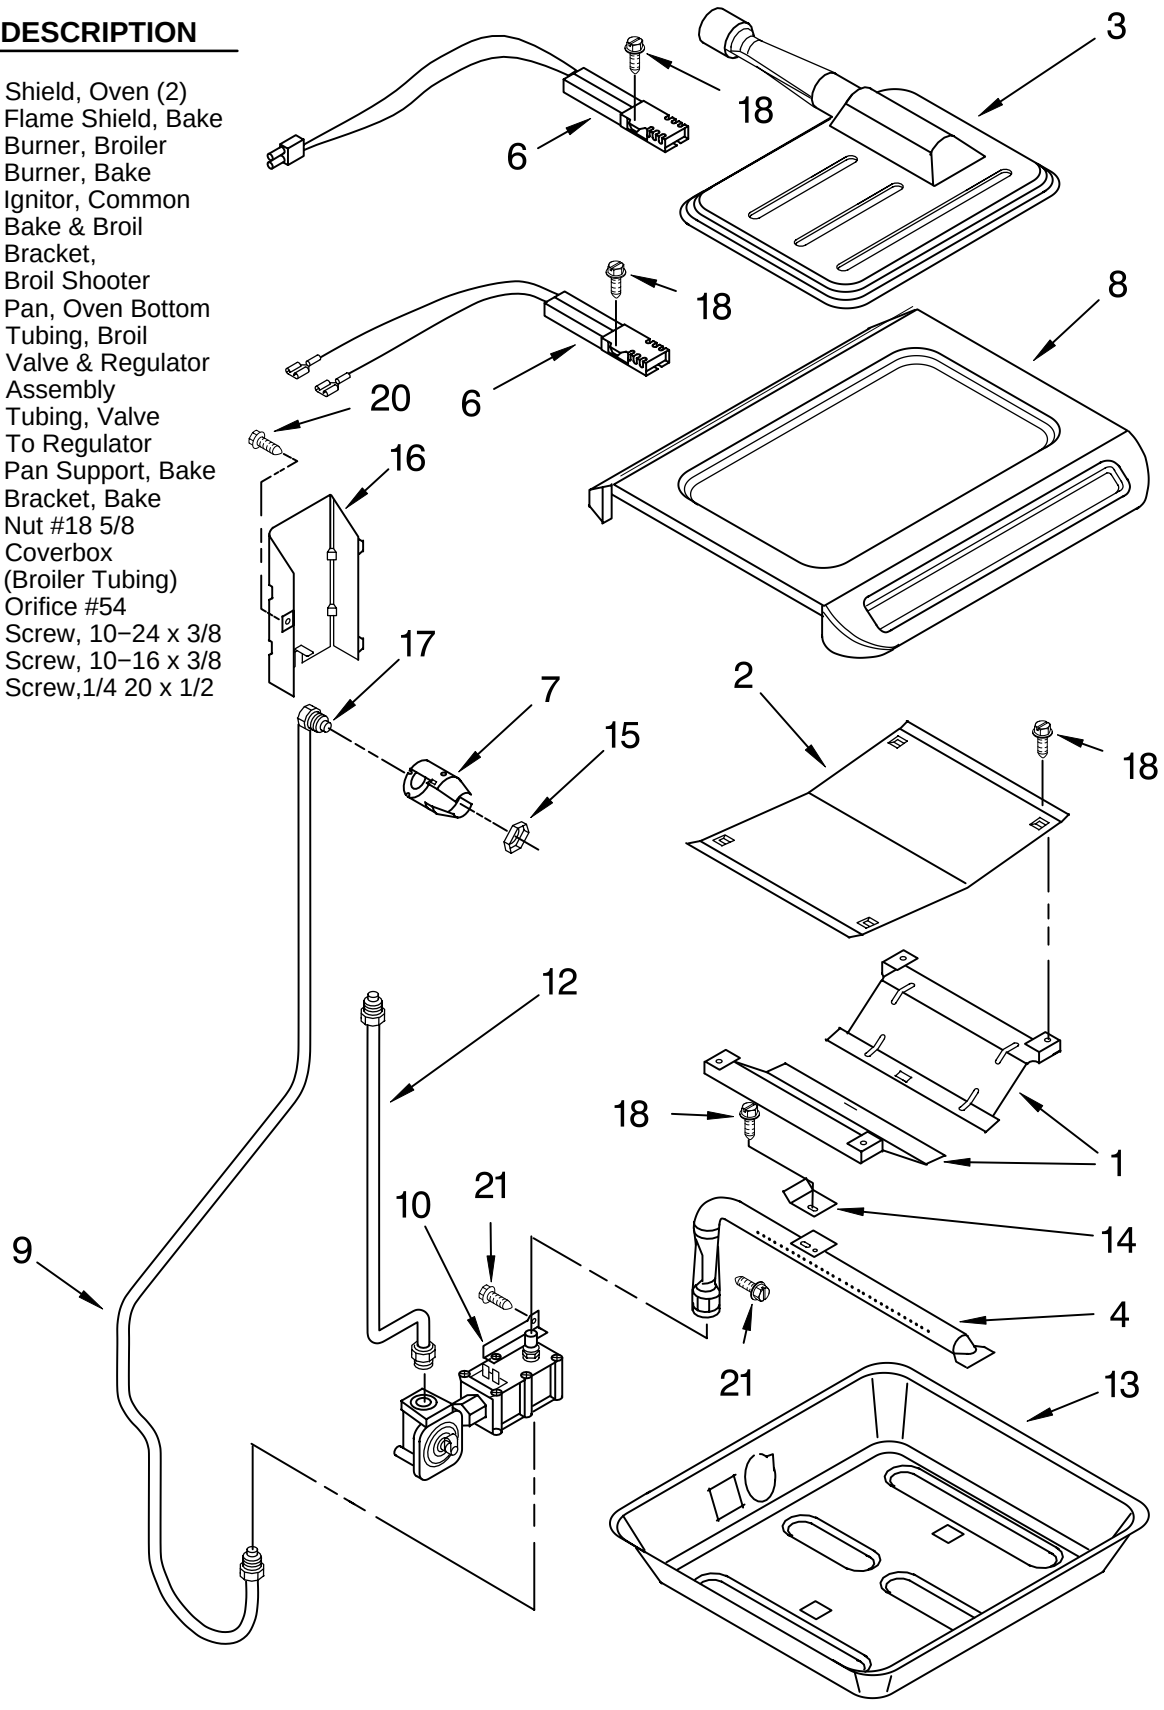

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

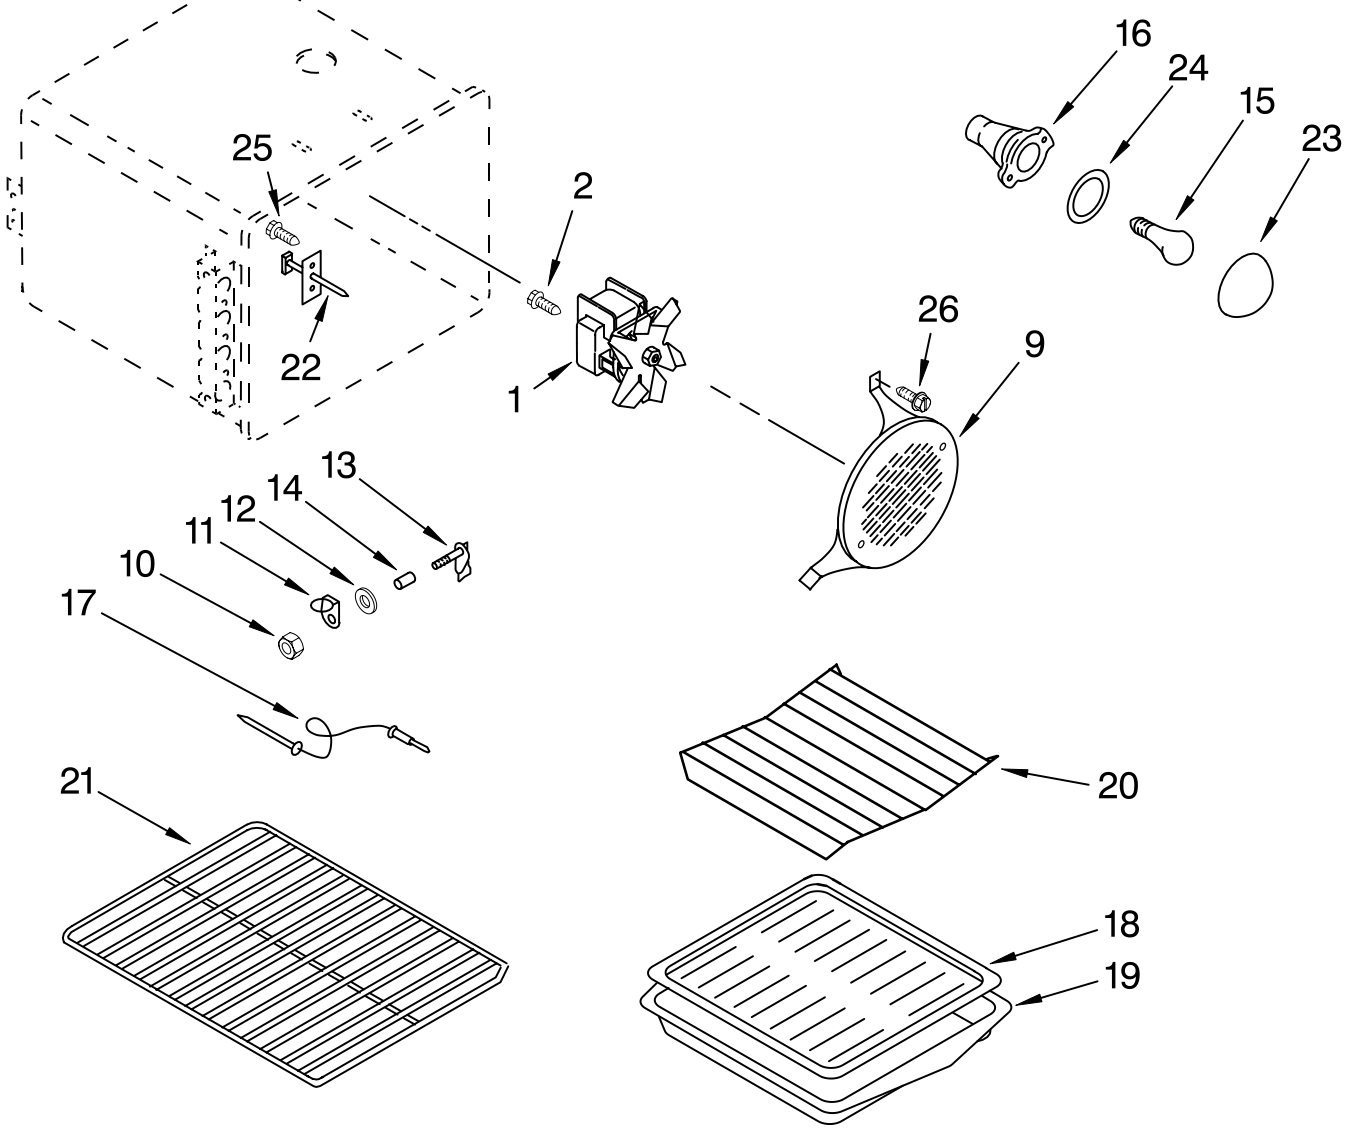

Illus. No.	Part No.	DESCRIPTION
1	9781543	Assembly, Fan
2	9780272	Screw, 10−16 x 1/2
9	9751904GM	Baffle, Convection
10	4167277	Lock−Nut, Cvr.Jack
11	4167266	Jack Cover
12	305289	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	8935	Bulb, Oven
16	9781050	Light, Socket
17	3150144	Probe, Meat
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
20	9750827	Rack, Roasting
21	9750823	Rack, Standard (3)
22	8053344	Sensor
23	9781049	Lens, Light
24	3184533	Gasket, Lens
25	9781509	Screw, 8−32 x 3/8
26	9780265	Screw, 10−16 x 3/8

REAR CHASSIS PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

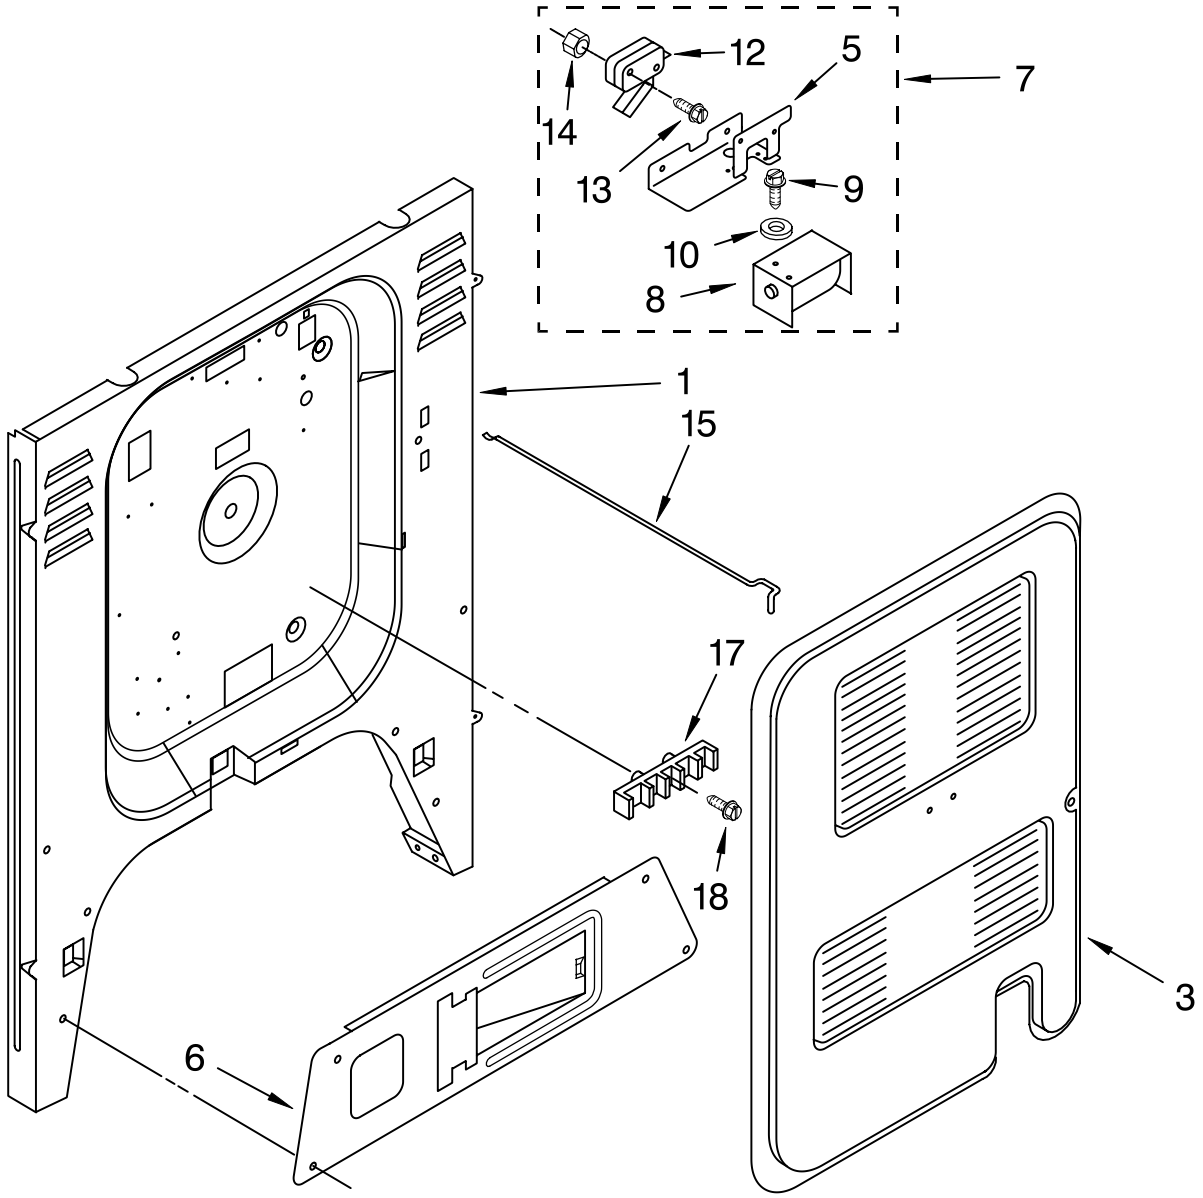

Illus. No.	Part No.	DESCRIPTION
1	9751051	Back panel,Chassis
3	9751353	Panel, Rear Cover
5	9751418	Bracket, Lock
6	9751500	Bracket, Regulator−Valve
7	9751439	Oven Lock Assembly
8	9751590	Solenoid
9	422222	Screw, 10−32 x .31
10	424238	Washer
12	9751763	Switch, Interloc
13	9750887	Screw, 4−40 x 1
14	9750888	Nut (2)
15	9750523	Rod, Lock
17	258076	Terminal Block
18	98884	Screw, 10−16 x 1

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: KGST307HWH4, KGST307HBL4, KGST307HBT4, KGST307HBS4
(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
**511873	White Porcelain (2 Oz.)
4392899	Biscuit

** **NOTE:** The spray paint is Porcelain; All Other Panels are Painted Surfaces.

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285006	Superior Black
206922	Primer (White)
4392901	Biscuit

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)
4392900	Biscuit(Uncut)

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)

INSULATION

9754004	Insulation, Wrap
9754011	Insulation, Rear
9754005	Insulation, Bottom

CLEANER, COOKTOP

9753543	Glass Cleaner
3183488	Scraper

ACCESSORIES

241430	Foil, Aluminum Oven (18" X 25')

CONVERSION KIT

	Gas Conversion Kit
9753604	(LP)
9752717	(Natural)

LUBRICANT

261582	Grease

ANTI−TIP KIT

9751745	Anti−Tip Kit

WIRING HARNESS PARTS

9781639	Harness, Wire (Main Harness)
9751708	Harness, Wire (Neutral Gas)
9753808	Harness, Wire (Spark Control)
9750376	Harness, Wire (Oven Door)
9752769	Harness, Wire (Spark Module)
9751868	Grommet, Harness
9781055	Power Cord
690989	Screw, Ground
3196520	Clip, Wire
98997	Clip
20082084	Tie, Wire
9752769	Harness, Wire (Dual Cooktop)
9753374	Harness, Wire (Dual Oven Light)